

HCT kit configuration can be as basic or advanced as desired. Most kits can also be upgraded at a later time.

Second Function Rotate Kits and Priority Brush Cutter Kits are available as upgrade to Factory Kits.

KIT TYPES Typical Configurations Call for custom applications	OIL DIRECTION			FLOW		PRESSURE		VALVE		RELIEF		ACTUATION			OPTIONS	
	Single Acting / 1-Way	Double Acting / 2-Way	Flow Direction Change Valve	Manually Adjusted	OEM Monitor Control	High	Medium	OEM Spare Valve	HCT Add On valve	Inline HCT Relief Valve	OEM Port Relief (qty 2)	Foot switch	Joystick (momentary)	Proportional Joystick OR Foot Pedal	Filter	Thumb Tee
BREAKER / COMPACTOR	●			a	▲		●	●		●		●	▲	f	■	
THUMB / TILT		●		b	▲		●	●			●		▲			
SHEAR / AUGER / GRAPPLE		●		a	▲	●		●			●		▲			
BREAKER - THUMB (DUAL PURPOSE)	●	●	●	a	▲		●	●			●		▲	■	■	
BREAKER - SHEAR (DUAL PURPOSE)	●	●	●	a	▲	●		●		c	●		▲	■	■	
ROTATION (Secondary Circuit)		●		●			●		d	●		●	▲			
ROTARY BRUSHCUTTER / MOWER	●			●		●			●	●		e		■		

● = Included in Kit

● = Required for Application

■ = Optional

▲ = Upgrade

a - For attachment requiring less than 1 pump flow

b - Knob style flow control valve

c - For Breaker Circuit

d - Newer CAT and Komatsu machines need OEM 2nd service valve

e - Maintained function: Click ON - Click OFF

f - Foot Pedal only